

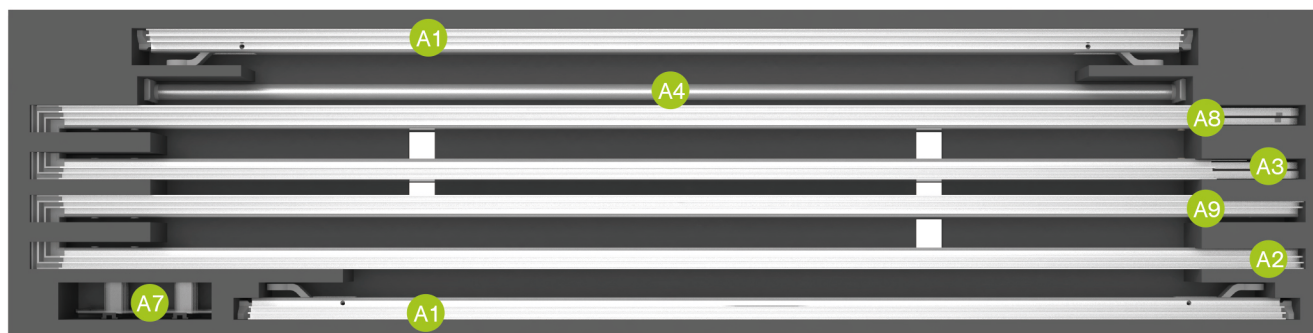


STEPS

Hardware in Box

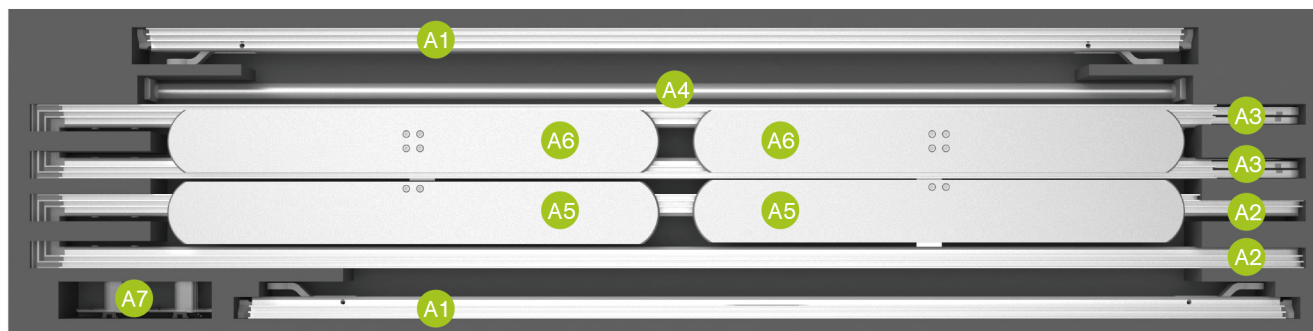


Parts with Labeling Codes

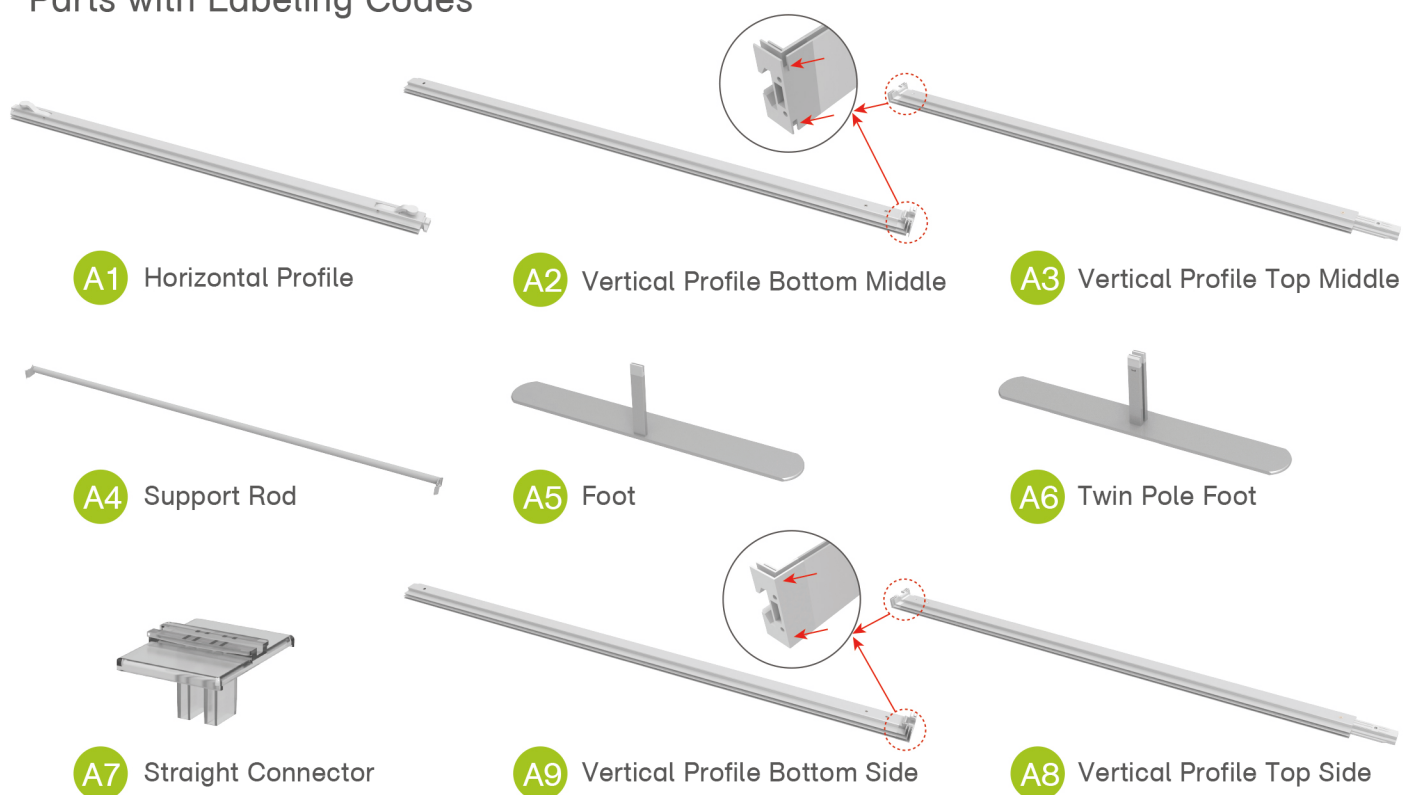

STEPS


Parts with Labeling Codes on Frame

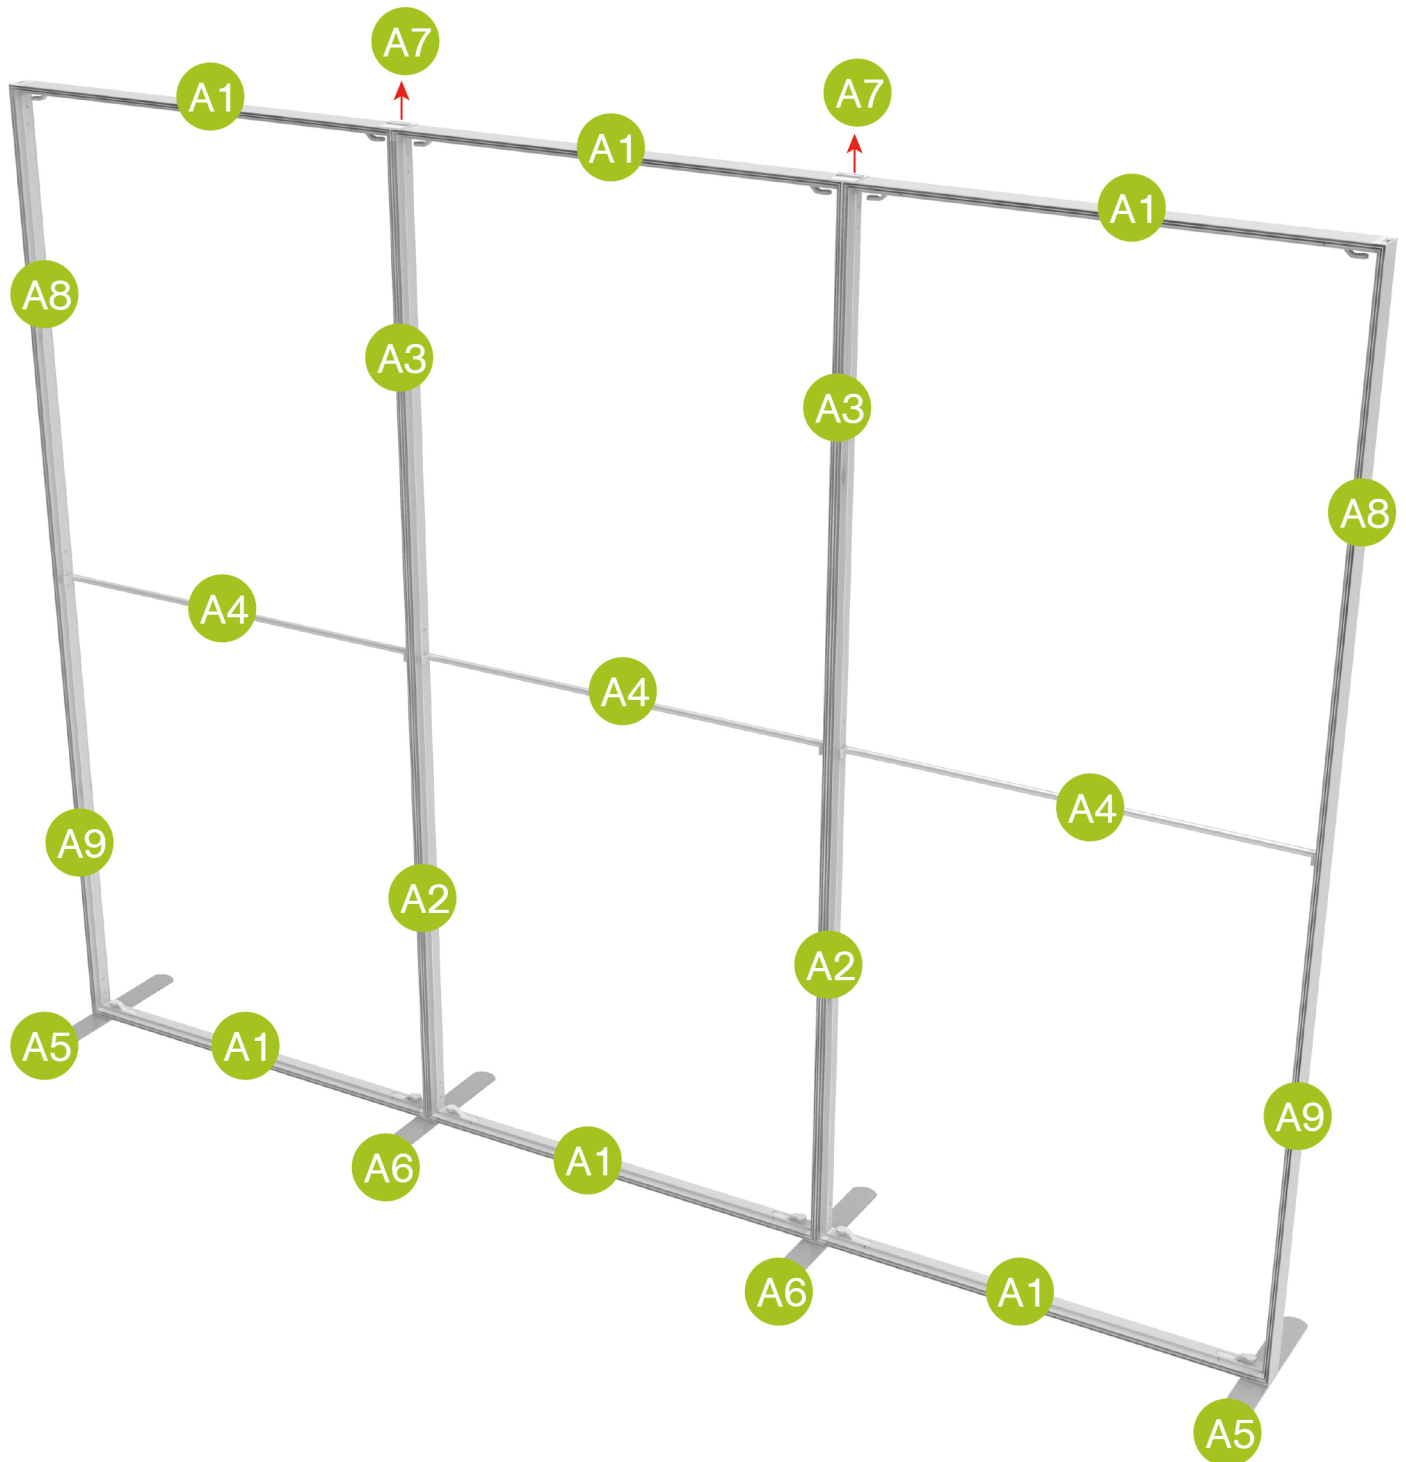

STEPS



STEP 01

Interconnect A2 & A3, A8 & A9 vertical profiles.

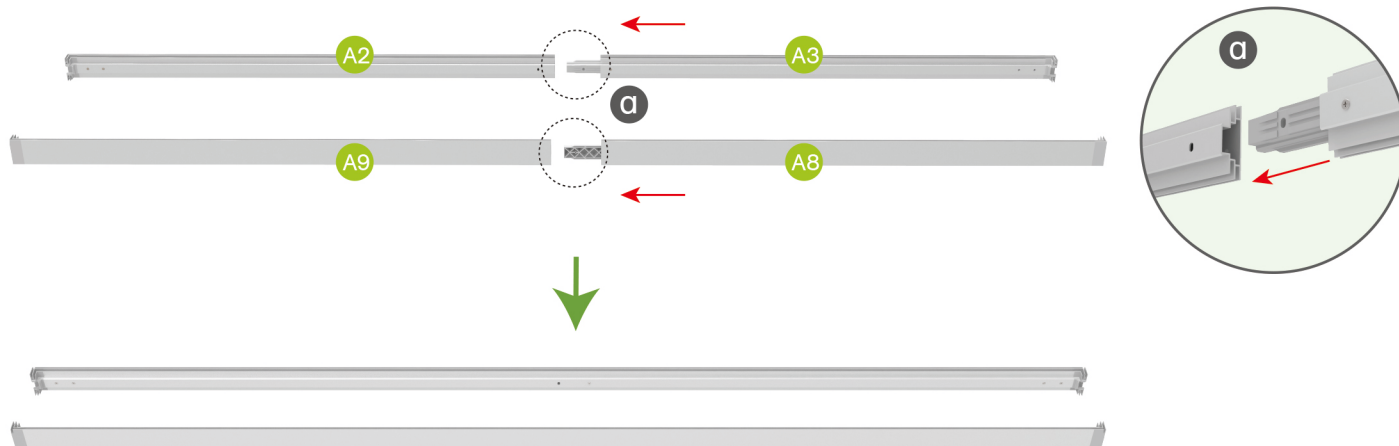

STEP 02



Interconnect horizontal & vertical profiles by pulling up buckle to insert into & pressing down to lock. Follow Parts with Labeling Codes on Frame above to set up.

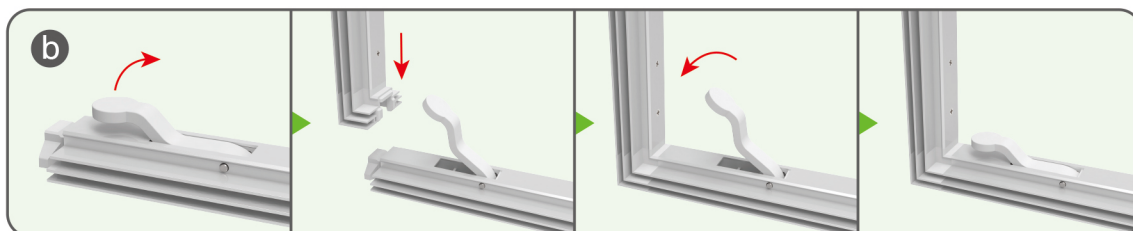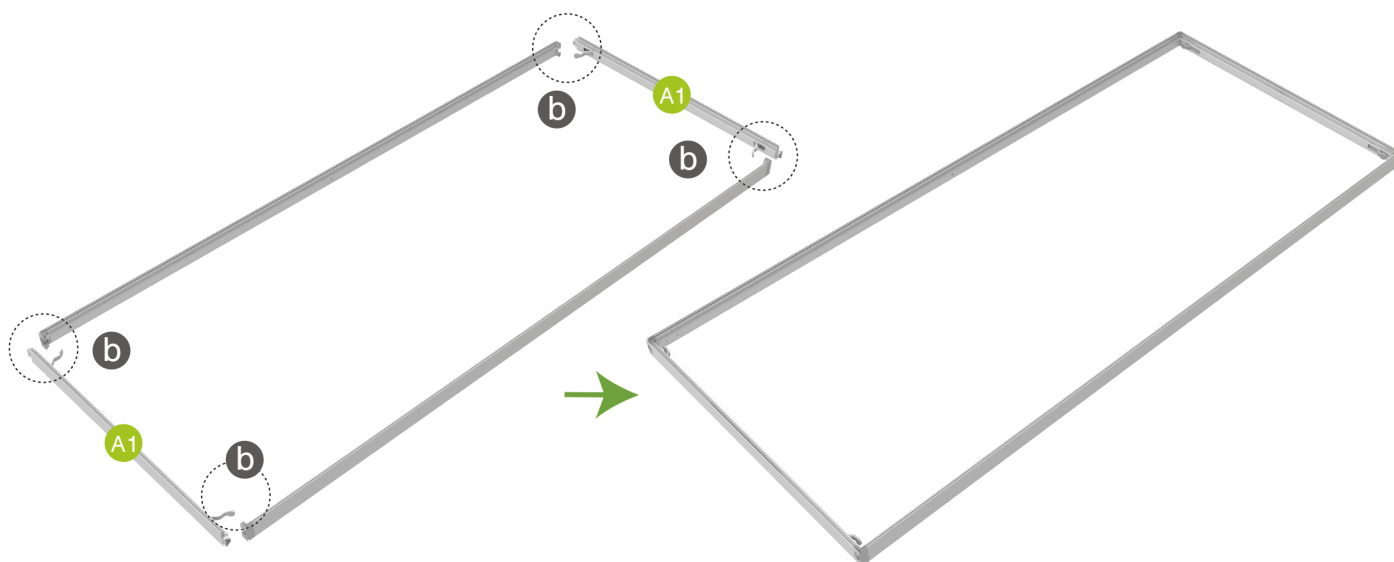

STEPS

STEP 03

Align side part's holes to install support rod.

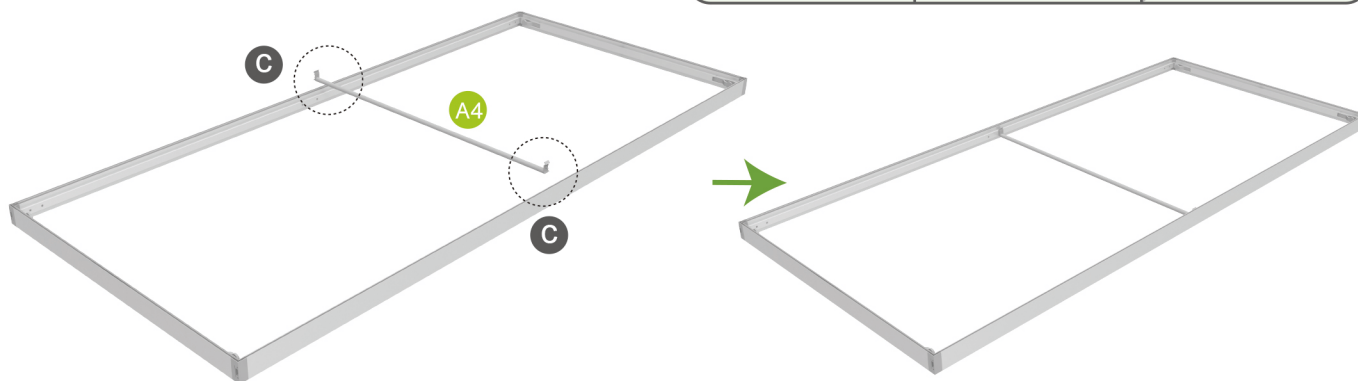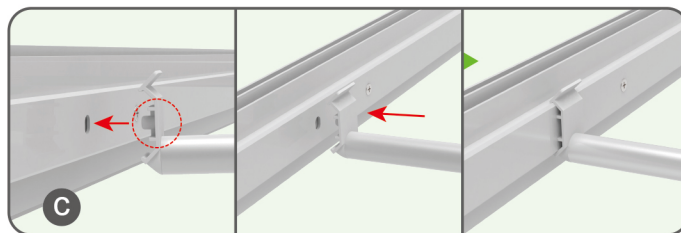

STEP 04

Insert frame onto feet, interconnect frames with connectors at top.



A7




A5



A6

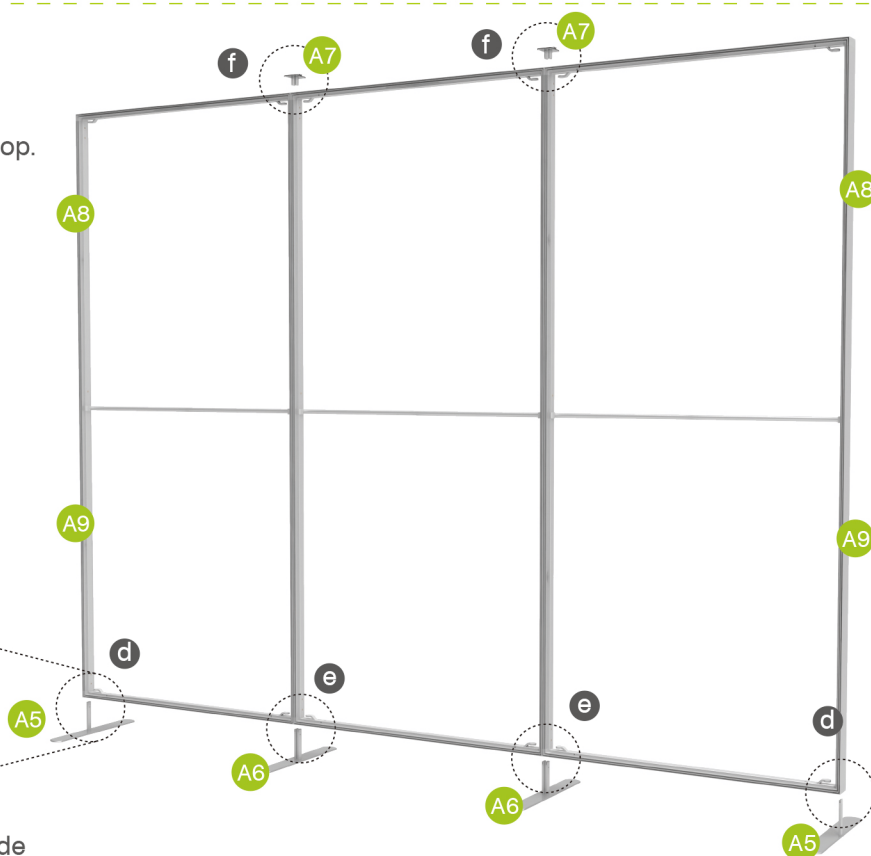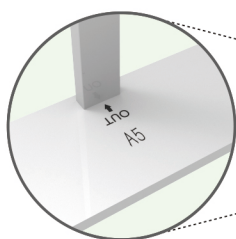


Align Feet's Outside with Frame's Outside

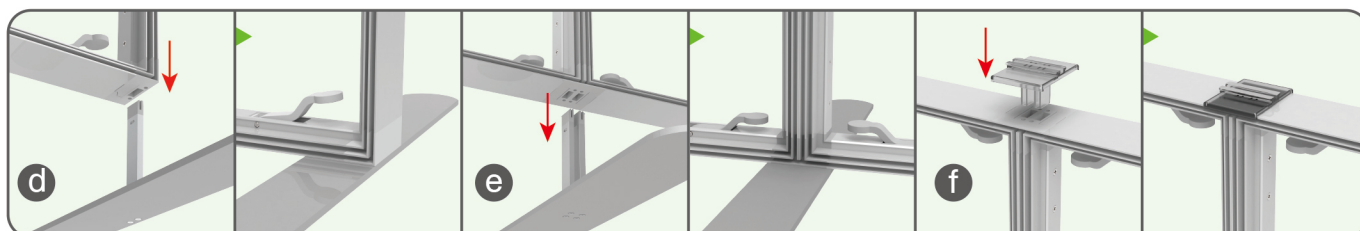


STEPS

STEP 05

Insert silicone edge graphic into channels from corners. (Same Steps for Double Sides)

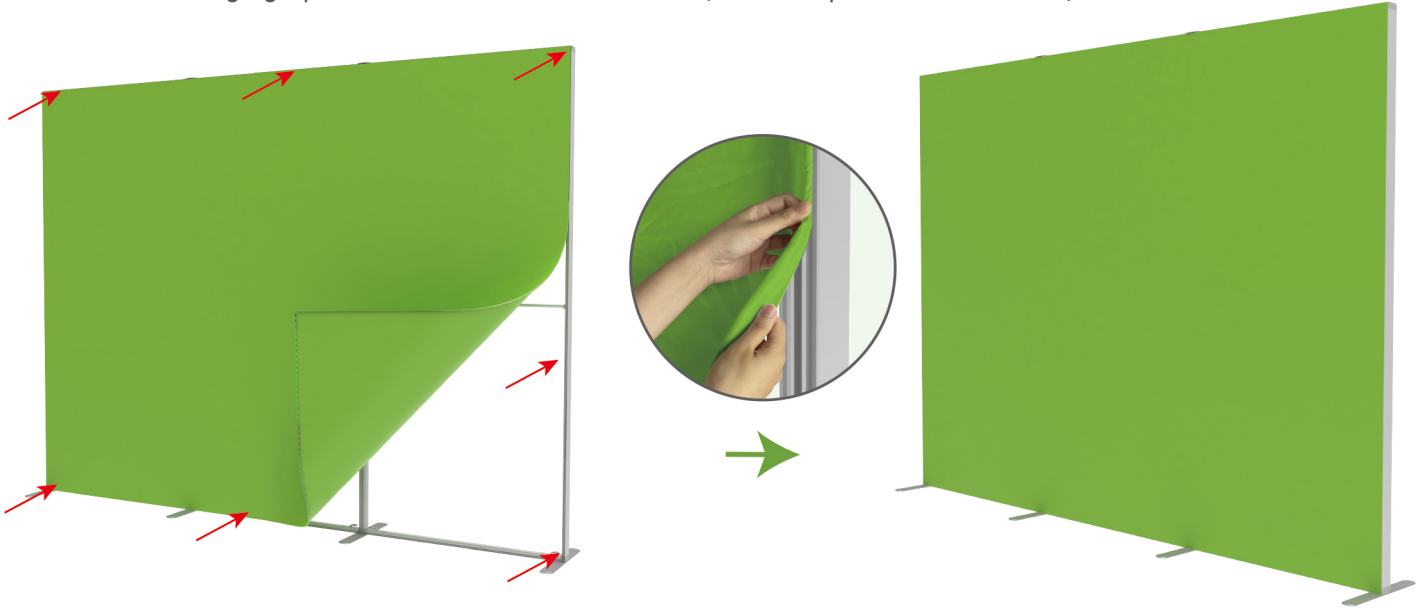

20ft Setup

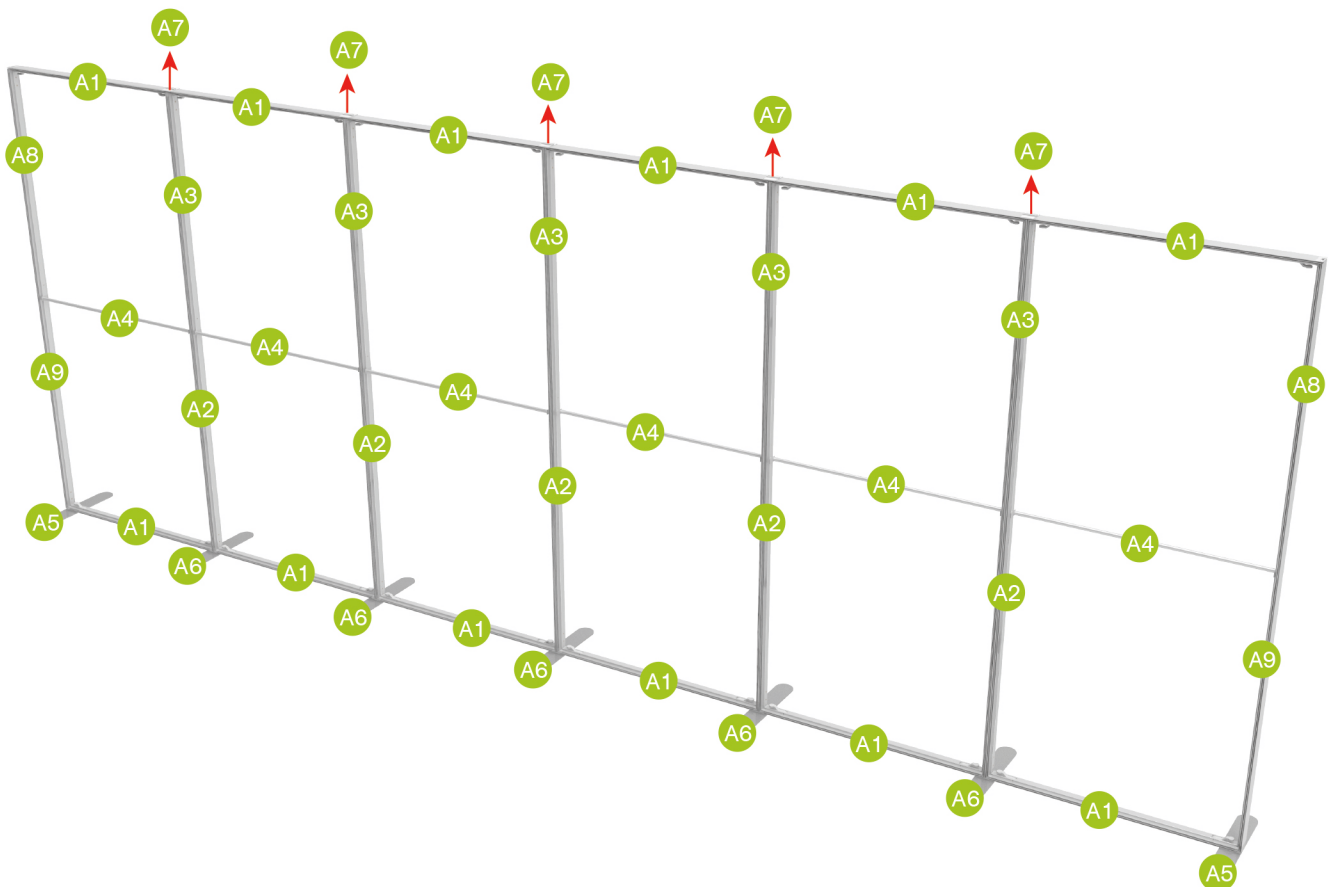

STEPS

Insert silicone edge graphic into channels from corners. (Same Steps for Double Sides)

